



THIS MAP SHOWS BVE STATION NUMBERS

LEGEND

MAIN ST STATION
(000) STATION NUMBER

STATION NUMBER INDICATION IN CONGESTED AREAS.
STATION NUMBERS APPEAR IN CIRCLES.

CIRCLES WITH TWO NUMBERS INDICATE THAT THE UPPER LEVEL IS ASSIGNED THE TOP NUMBER, AND THE LOWER LEVEL IS ASSIGNED THE BOTTOM.